## **PARTS LIST**

for



# **AUTOMATIC WASHER**

# MODEL LSV6233AW0

▲ W–White, N–Almond, G–Golden Harvest




FOR CUSTOMER SATISFACTION ALWAYS USE FACTORY SPECIFICATION PARTS



Whirlpool CORPORATION

Benton Harbor, Michigan.

## **TOP AND CABINET PARTS**

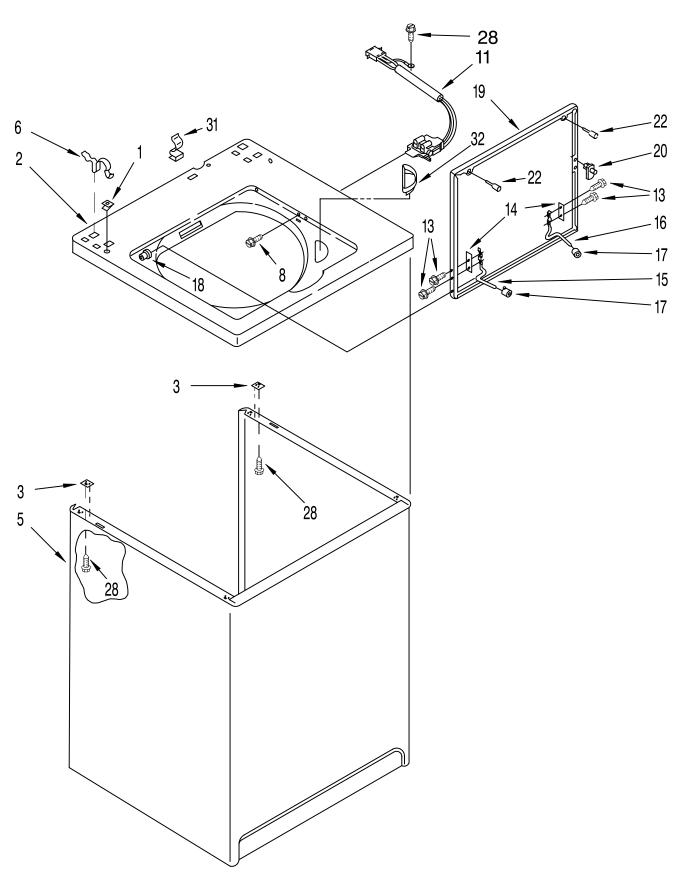


## **TOP AND CABINET PARTS**

Illus. Part No. No. DES	CRIPTION No.	s. Part . No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1 357213 Nut, P 2 Top 3358200 White 3358201 Almon 3358202 Golde 3 62750 Space Top (4 5 Cabine 63424 White 63425 Almon	nd n Harvest 11 er, Cabinet To 13 4) et 14	3356311 3352629	Clip, Top & Cabinet & Rear Panel (2) Screw & Washer, Lid Switch (2) Switch, Lid Screw, Lid Hinge Mounting (4) Pad, Lid Hinge (2) Hinge, Lid (L.H.) Hinge, Lid (R.H.) Bumper, Lid Hinge	18 19 20 22 28 31 32	21258 3354570 3354571 3354574 358684 93770 384435 90016 63289	Bearing, Lid Hinge (2) Lid White Almond Golden Harvest Strike, Lid Switch Bumper, Lid (2) Screw, 10–16 x 1/2 (5) Clip, Harness Dispenser, Bleach

		LITERA	TUR	E AN	D OPTIONA	L PA	ARTS	<b>,</b>
Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
			140.	140.	OPTIONAL PART	I — —		
<u> </u>	ERATUR	<u>E PARTS</u>				1		
		01	PAIN	T, TOUC	H-UP (1/2oz.)	OIL		
LII	3358964	Sheet, Installation Instructions						
LIT	3357460	Guide, Use and		72017	White		350572	Oil, Gearcase
LIT	3358656	Care Energy Guide		72107				(16 Oz.)
	3358743	Label, Wiring		72110	Golden Harvest	LUB	RICANT	•
	4040000	Diagram	PAIN	T, PRES	SURIZED SPRAY			
LII	4313896	Manual, (Washer) Do-It-Yourself	(13 o	z.)			205200	Lubricant (Use
LI	T881014	List, Repair Parts		<del></del>			285208	Only in Brake
			350941 350938	Leveler (Thinner) Primer, Gray			Shoe Assembly On Roller and	
				350930	White			Pin)
				350956 261890	Almond Golden Harvest	SEA	<u>LER</u>	
			PAIN	T, BULK	(1 at.)			
				.,	<u>(                                    </u>		285195	Sealer, Gasket (.20 Fl. Oz.) (6 ml)
				978883 <i>A</i>	3 Almond (Uncut)	SHIF	<u>(IT</u>	
				261891			3348675	Shipping Kit
								•
						ACC	ESSOR	Y PARTS
							89121	Stand-Pipe Kit
							367031 285320	Drain Protector Siphon Break Kit


### **CONTROLS AND REAR PANEL PARTS**

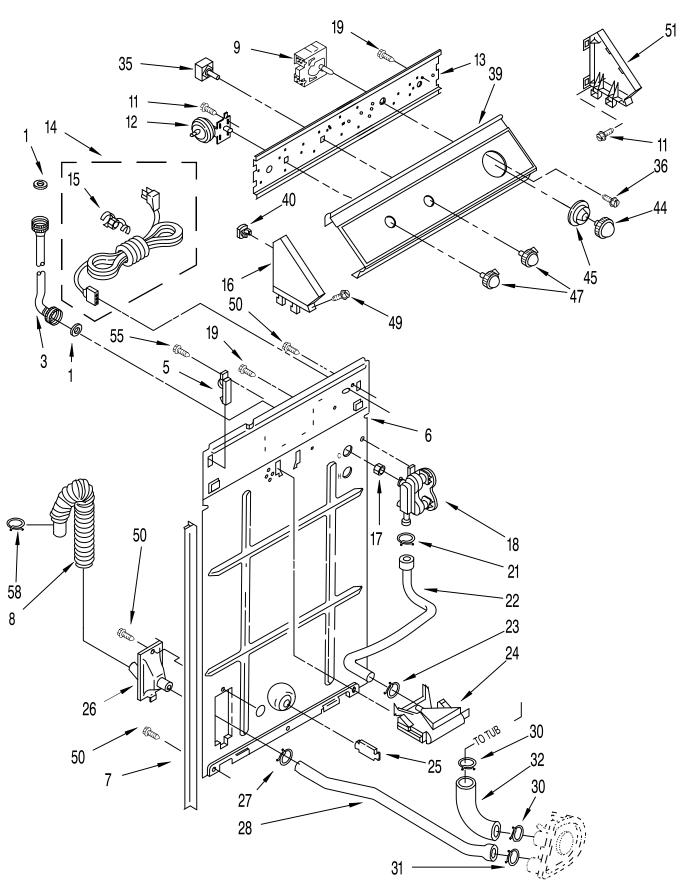

## **CONTROL AND REAR PANEL PARTS**

					i. LOVOZSSAVIO	_		
Illus	. Part		Illus.	. Part		Illus	. Part	
No.	No.	DESCRIPTION	No.	No.	DESCRIPTION	No.	No.	DESCRIPTION
1	16123	Washer, Water	16		Cap, End (L.H.)	32	62731	Hose, Pump To Tub
		Inlet Hose (4)		3358531	White/Chrome	35	661538	Switch, Water
		(1-1/16 x 5/8)		3358532	Almond/Chrome			Temperature
3	660028	Hose, Water	l	3358533	Black/Chrome			3347117 (Alt.)
		Inlet (2)	17	96160	Screen, Filter (2)			3348352 (Alt.)
		81339 (Alt.)	18	358992	Valve, Water	36	96435	Screw, Timer
		366108(Alt.)			Mixing			Mounting
		387057 (Alt.)	19	90864	Screw,			(10-32 x 1) (2)
5	387402	Hinge, Console (2)			10-24 x 3/8 (2)	39	3359244	Panel, Console
6	3357978	Panel, Rear	21	660632	Clamp, Hose	40	689559	Nut, Push-In (2)
7	62747	Pad, Rear Panel			272846 (Alt.)	44	3358419	Knob, Timer
8	661575	Hose, Drain			353367 (Alt.)	45	3358446	Dial, Timer
		(5-1/2 Ft.)	22	62662	Hose, Vacuum	47	3358434	Knob, Control
	661577	Hose, Drain			Break	49	3353145	Screw, 8-18
		(10 Ft.)	23	371503	Clamp, Hose			(Panel to Top)
		(Not Included)	24	387606	Break, Vacuum	50	62863	Screw, 10-16 x 3/8
9	3358741	Timer, Control	25	63290	Support, Rear	51		Cap , End (R.H.)
		(60 Hz.)			Panel		3358516	White/Chrome
		(Motor Not A	26	3355497	Connector, Drain		3358517	Almond/Chrome
		Service Part)			Hose		3358518	Black/Chrome
11	3390646	Screw, 8-18 x 5/16	27	356138	Clamp, Hose	55	3357011	Screw,
12	3356467	Switch, Water Level	28	3359818	Hose, Pump To			10-16 x 1/2
13	3358469	Bracket, Control			Drain Connector	58	3357331	Clamp, Drain
14	62734	Cord, Power	30	371502	Clamp, Hose			Hose
15	63848	Strain Relief,	31	660628	Clamp, Hose	59	3348424	Shield, Suds
		Power Cord			272858 (Alt.)			,
					370447 (Alt.)			
					353097 (Alt.)			
					( -,			

## **AGITATOR, BASKET AND TUB PARTS**

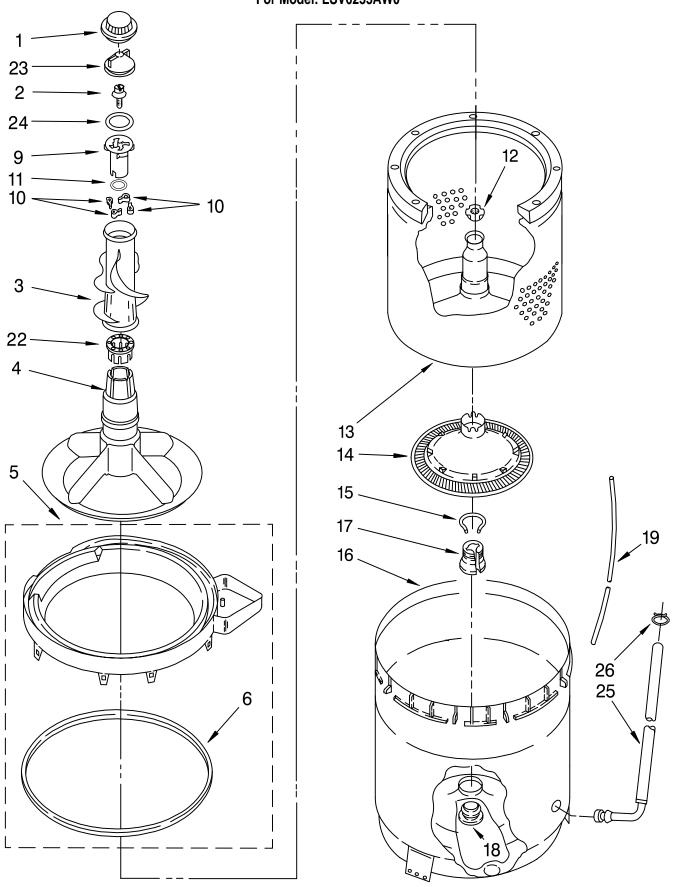


## AGITATOR, BASKET AND TUB PARTS

For	Mod	:leb	LSV	3233	βA	W0

Illus No.	. Part No.	DESCRIPTION	IIIus. No.	Part No.	DESCRIPTION	Illus. No.	Part No.	DESCRIPTION
1 2 3 4 5 5 6 9 10	3355758 358237 3348752 3347288 63851 63852 3351001 387091	Cap, Agitator Screw & Washer (5–16–24 x 1) Clothes Mover Agitator Tub Ring & Gasket Gasket, Tub Ring Cam Driven Dog, Agitator Clutch	11 12 13 14 15 16	357574 21366 64217 62941 62942 388893	Seal, Agitator Nut, Spanner Basket & Balance Ring Filter, Plate (Includes Illus. 15) Lock, Filter Tub	17 18 19 22 23 24 25 26	389140 383727 3347780 3350389 3347290 3348855 63323 356436	Block, Basket Drive Gasket, Centerpost Hose, Pressure Switch Spacer, Thrust Cap, Barrier Seal, Inner Cap Hose, Bleach Clamp, Hose


## **MISCELLANEOUS PARTS**

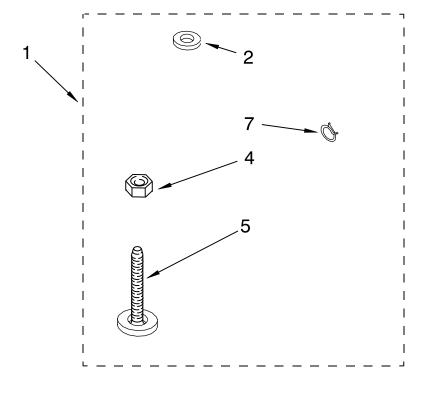


Illus. No.	Part No.	DESCRIPTION
1	3359460	Miscellaneous Parts Bag
2	16123	Washer, Inlet Hose
4	3359452	(1–1/16 x 5/8) (4) Nut, Lock (3/8–16)
5 7	389102 356138	Foot, Front (2) Clamp, Hose

7 881014


### BRAKE, CLUTCH, GEARCASE, MOTOR AND PUMP PARTS

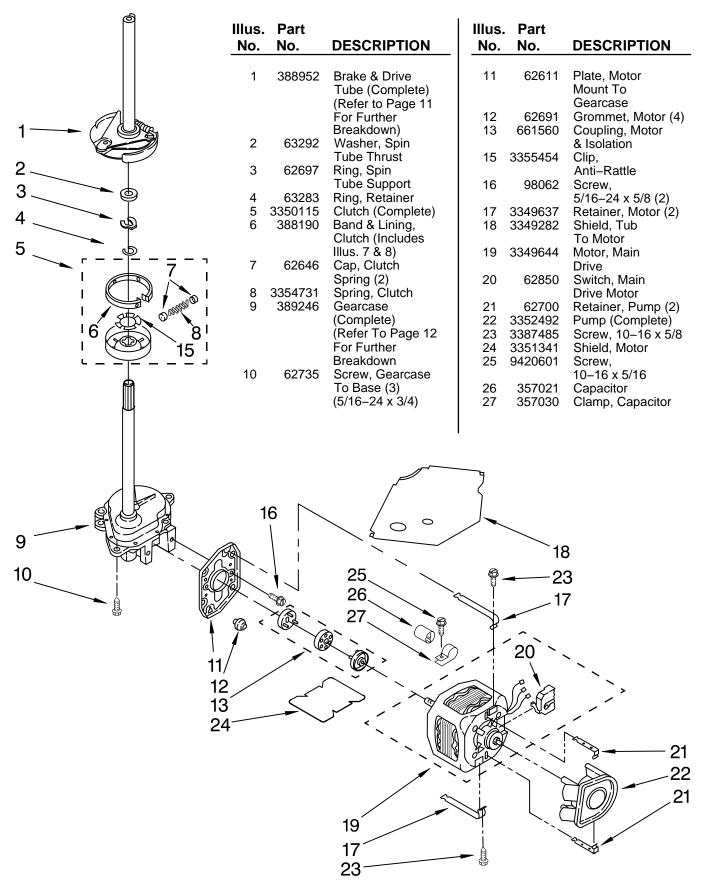

#### **MACHINE BASE PARTS**

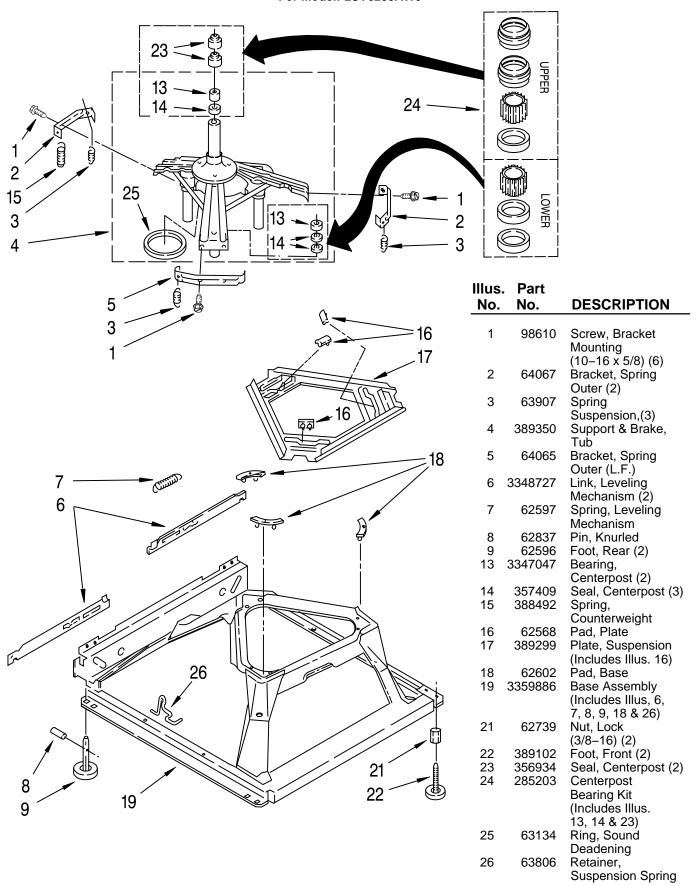


#### **WIRING HARNESS PARTS**

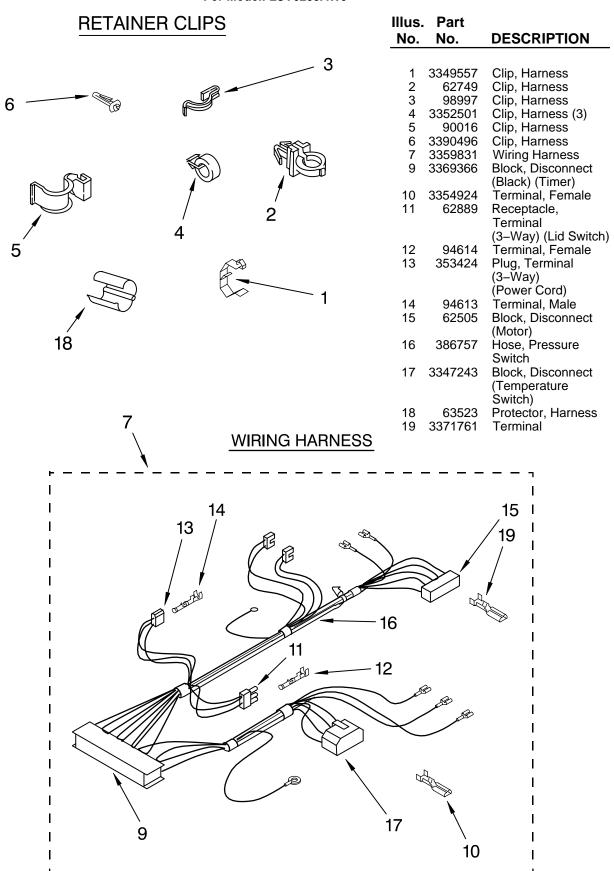

### **BRAKE AND DRIVE TUBE PARTS**

For Model: LSV6233AW0

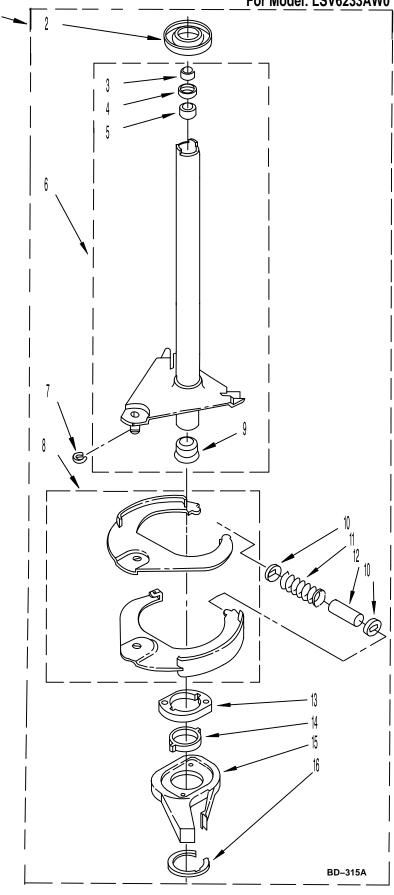


Illus. No.	Part No.	DESCRIPTION
1	388952	Brake And Drive Tube (Complete)
2	62658	Ring, Thrust
3	91939	Seal, Oil
2 3 4	356427	Seal, Drive Tube
5	356937	Spacer, Drive Tube
6	64027	Tube, Basket Drive (Includes Illus. 3, 4, 5 & 9)
7	64035	Ring, Retaining
8	64232	Shoe, Brake
9	62703	"T" Bearing, Spin Tube
10	62648	Cap, Brake Spring (2)
11	387806	Spring, Brake
12	62909	Sleeve, Brake Spring
13	63023	Cam, Brake Release
14	63022	Sleeve, Cam
15	64194	Driver, Brake
16	90368	Ring, Retaining

## FOLLOWING PARTS NOT ILLUSTRATED

285208 Lubricant (Use Only In Brake Shoe Assembly On Roller & Pin)

#### **GEARCASE PARTS**

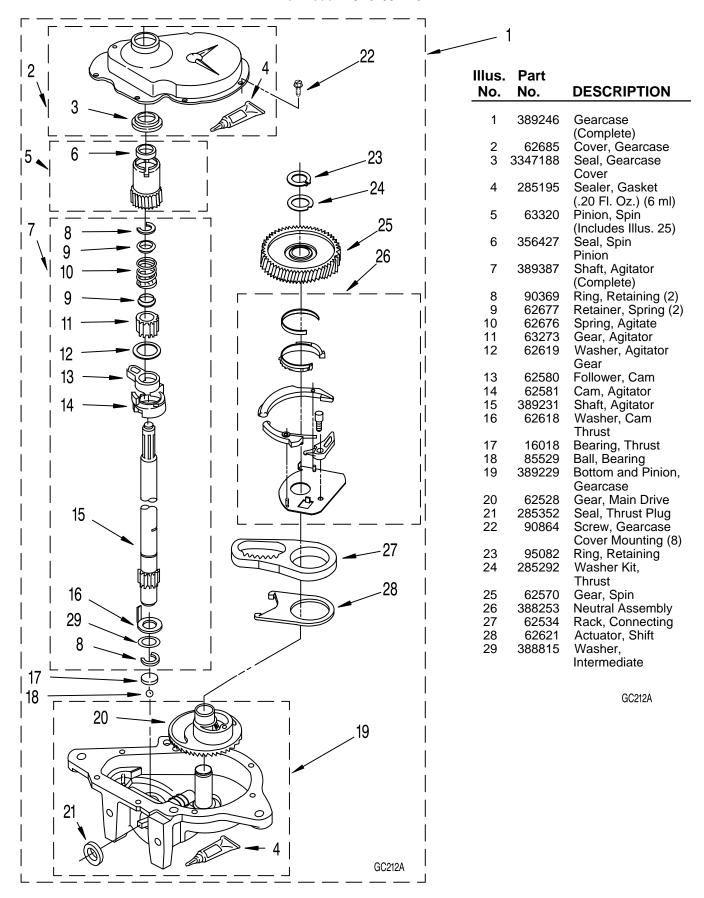

### **WATER SYSTEM PARTS**

